



ITEM NO.	PART NO.	DESCRIPTION	QTY. REQ'D
1	60404	Motor Assembly (includes motor, cam, switch, cord/adaptor, motor frame and motor screws x2)	1
2	60407	Housing Assembly (includes chrome upper housing, accent piece, black lower housing, switch screw, housing screws x4 and hanger hook)	1
3	60408	Assembly Latch (includes release button, coil springs x2, blade cap, and blade screws x2)	1
4	60409	Release Assembly (includes pin, left tension spring, right tension spring, and release lever)	1
5	60411	Switch Actuator	1
6	60412	Tension System (includes yoke, 3lb tension spring, and tension spring screws x2)	1
7	200119	Euro Plug	1
8	200121	UK Plug	1
9	200122	Australia Plug	1

ITEM NO.	PART NO.	DESCRIPTION	QTY. REQ'D

IMPORTANT INFORMATION

When ordering repair parts, include part number, part name and model of trimmer. For best performance, trimmer blades should be **CLEANED** and **OILED** with Andis Clipper Oil before and after use. If repair is necessary, return to any Andis Authorized Repair Service Station, or to Andis Company, 1800 Renaissance Blvd., Sturtevant, Wisconsin, 53177 U.S.A.. Pack carefully, mail either Insured Parcel Post, or U.P.S. , attach a letter to outside of package explaining difficulty.